

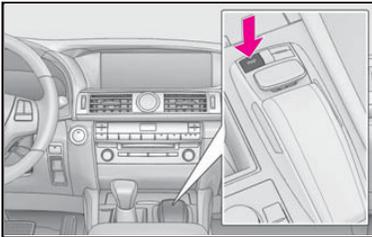
Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.



It is also possible to customize certain vehicle features yourself using the navigation system screen.

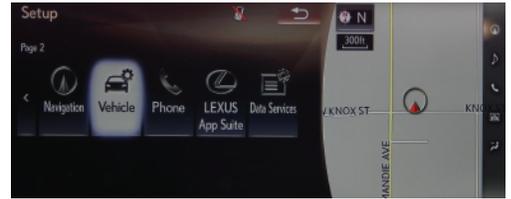
Vehicles with Navigation System:



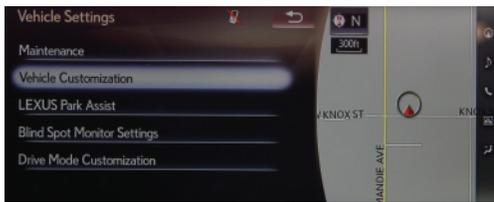
STEP 1 Press the **MENU** button.



STEP 2 Highlight  using the Remote Touch unit and push knob to select.



STEP 3 Scroll to page 2. Highlight  and push knob to select.



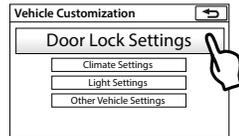
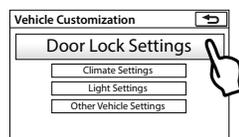
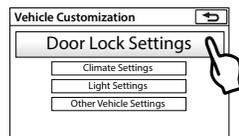
STEP 4 Select **Vehicle Customization** and push knob to select.

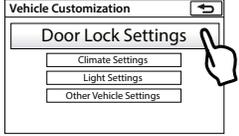
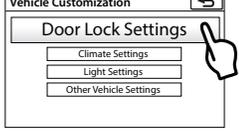
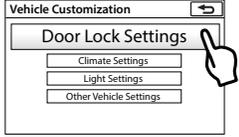
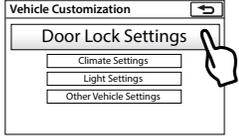
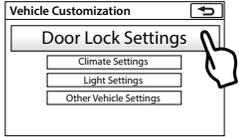
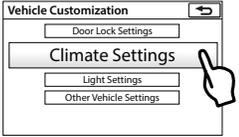
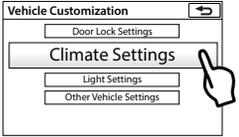
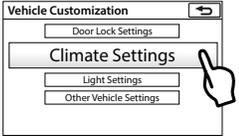


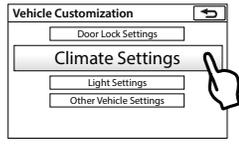
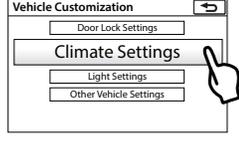
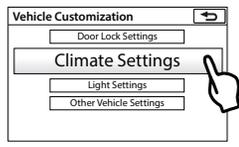
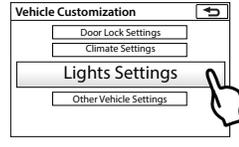
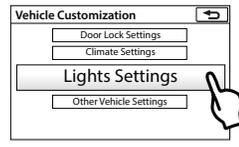
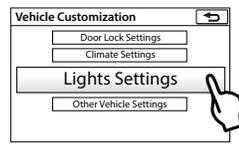
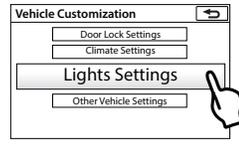
STEP 5 Select category and scroll to specific customization setting.

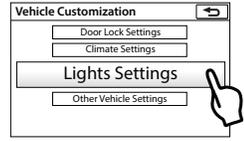
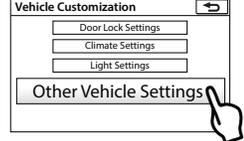
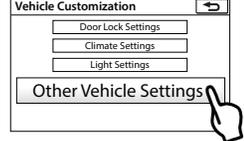
Vehicle must be in "On" mode to program personalized settings.

Please refer to the 2017 LS 460 Quick Guide or Navigation Owner's Manual for more information on Remote Touch operations.

 
 
	Settings that can be customized by:	
	Using the Navigation System	Dealer
<h3>Door Lock Settings</h3> <p>1. Automatic Door Lock The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher = By speed <input type="checkbox"/> The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By shift from P <input type="checkbox"/> The doors will not automatically lock = Off 		
<p>2. Automatic Door Unlock The automatic door locks can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically unlock when the vehicle is shifted into Park (Standard) = By shift to P <input type="checkbox"/> All the doors automatically unlock when the driver door is opened = By driver door <input type="checkbox"/> The doors will not automatically unlock = Off 		
<p>3. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On <input type="checkbox"/> Pressing the unlock button one time unlocks all doors = Off 		

<u>Door Lock Settings (cont'd)</u>	Using the Navigation System	Dealer
<p>4. Select Doors to Unlock When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Gripping the driver door handle will unlock all doors = All doors <input type="checkbox"/> Gripping the door handle of any door will unlock that door = Each Door <input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Standard) = Driver's door <input type="checkbox"/> Gripping the door handle of either side door will unlock side doors = Side Doors 		
<p>5. Access System with Electronic Key Unlock the doors with:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off <input type="checkbox"/> Smart Access (touch door handle) or electronic key (Standard) = On 		
<p>6. Auto Re-lock Timer When the doors are unlocked and not opened:</p> <ul style="list-style-type: none"> <input type="checkbox"/> They will automatically re-lock in 120 seconds <input type="checkbox"/> They will automatically re-lock in 60 seconds (Standard) <input type="checkbox"/> They will automatically re-lock in 30 seconds <input type="checkbox"/> They will not re-lock = Off 		
<p>7. Lock/Unlock Feedback - Lights When the lock or unlock button on the electronic key is pressed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On <input type="checkbox"/> Lights will not flash = Off 		
<p>8. Lock/Unlock Feedback - Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p> <input type="checkbox"/> off <input type="checkbox"/> volume 1 <input type="checkbox"/> volume 2 <input type="checkbox"/> volume 3 <input type="checkbox"/> volume 4 <input type="checkbox"/> volume 5 <input type="checkbox"/> volume 6 <input type="checkbox"/> volume 7 (Standard) </p>		
<p><u>Climate Settings</u></p> <p>9. Auto Seat Temperature FR L (Front Left) Sensitivity level for climate controlled (A/C, heater) driver seat:</p> <p> <input type="checkbox"/> Very High <input type="checkbox"/> High <input type="checkbox"/> Normal (Standard) <input type="checkbox"/> Low <input type="checkbox"/> Very Low </p>		
<p>10. Auto Seat Temp. FR R (Front Right) Sensitivity level for climate controlled (A/C, heater) front passenger seat:</p> <p> <input type="checkbox"/> Very High <input type="checkbox"/> High <input type="checkbox"/> Normal (Standard) <input type="checkbox"/> Low <input type="checkbox"/> Very Low </p>		
<p>11. Auto Heated Steering Wheel* Operates automatically according to the outside and cabin temperature when the engine switch is turned to IG-ON:</p> <ul style="list-style-type: none"> <input type="checkbox"/> On (Standard) <input type="checkbox"/> Off <p>*If equipped</p>		

Climate Settings (cont'd)	Using the Navigation System	Dealer
<p>12. Auto Heated Steering Wheel Time* Adjust the time when heated steering wheel automatically turns off:</p> <p>Very Short Short Normal (Standard) Long Very Long</p> <p>*If equipped</p>		
<p>13. Smog Sensor Sensitivity When in Auto recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p>lowest sensitivity sensitivity 2 sensitivity 3 normal (Standard) sensitivity 5 sensitivity 6 highest sensitivity</p>		
<p>14. Auto A/C Mode When Auto A/C is selected:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off <p>*The A/C compressor will be engaged when the Auto A/C button is pressed a second time</p>		
<p>Lights Settings</p>		
<p>15. Headlamps-On Sensitivity The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode):</p> <p>very dark dark normal (Standard) light very light</p>		
<p>16. Headlights Auto-Off Timer When the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode):</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off in 90 seconds <input type="checkbox"/> The headlights will turn off in 60 seconds <input type="checkbox"/> The headlights will turn off in 30 seconds (Standard) <input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened 		
<p>17. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> On (Standard) <input type="checkbox"/> Off 		
<p>18. Interior Lights Off Timer The interior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off 		

<u>Lights Settings (cont'd)</u>	Using the Navigation System	Dealer
<p>19. Exterior Lights Off Timer The exterior lights can be adjusted to stay on after closing the door as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off 		
<p>Other Vehicle Settings</p> <p>20. Driver's Seat Easy Exit When the vehicle is placed in Park and the ignition turned off, the driver seat can be set as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Automatically move fully away from the steering wheel (Standard) = Full <input type="checkbox"/> Automatically move partially away from the steering wheel = Partial <input type="checkbox"/> Remain in the current position, as set by the driver = Off 		
<p>21. Lane Change Signal Flashes Push turn signal lever partway to signal a lane change. Signal will flash:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 11 times <input type="checkbox"/> 9 times <input type="checkbox"/> 7 times <input type="checkbox"/> 5 times <input type="checkbox"/> 3 times (Standard) <input type="checkbox"/> Off 		
<p>Programmable by Dealer Only</p> <p>22. Unlock on Second Key Turn When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key one time will unlock all doors = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On 	<hr style="width: 100px; margin: auto;"/>	 Dealer only
<p>23. Panic Mode When pressing the panic button on the electronic key:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On 	<hr style="width: 100px; margin: auto;"/>	 Dealer only
<p>24. Door Lock Buzzer When the lock button on the electronic key is pressed and a door is not fully closed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On 	<hr style="width: 100px; margin: auto;"/>	 Dealer only
<p>25. Opening the Trunk Pressing the trunk release button on the electronic key will open the trunk. The release button can be programmed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Press button one time to release the trunk (No delay) <input type="checkbox"/> Press button two times to release the trunk <input type="checkbox"/> Press and hold button for 0.8 seconds to release the trunk (Standard) <input type="checkbox"/> The button can be turned off so the trunk cannot be opened using the electronic key 	<hr style="width: 100px; margin: auto;"/>	 Dealer only

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
<p>26. Close Windows and Moon Roof with Mechanical Key* When using the mechanical key to operate windows and moon roof:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows and moon roof = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows and moon roof (Standard) = On <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>27. Open Windows and Moon Roof with Mechanical Key* When using the mechanical key to operate windows and moon roof:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows and moon roof = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows and moon roof (Standard) = On <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>28. Open Windows and Moon Roof with Electronic Key* When pressing the unlock button on the electronic key for 3 seconds:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The windows and moon roof will not open (Standard) = Off <input type="checkbox"/> All the windows and moon roof will open = On <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>29. Open/Operate Moon Roof with Mechanical Key* When option #27 is on, turning the key left and holding for 2 seconds will:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Not operate the moon roof <input type="checkbox"/> Operate the moon roof (Standard) <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>30. Close Moon Roof with Mechanical Key* When option #26 is on, turning the key right and holding for 2 seconds will:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Not close the moon roof <input type="checkbox"/> Close the moon roof (Standard) <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>31. Open/Operate Moon Roof with Electronic Key* When option #28 is on, pressing the unlock button on the electronic key for 3 seconds will:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Not operate the moon roof <input type="checkbox"/> Operate the moon roof (Standard) <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>32. Slide/Tilt Moon Roof with Mechanical Key* When options #27 and #29 are on, the moon roof can be programmed to:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>33. Slide/Tilt Moon Roof with Electronic Key* When options #28 and #31 are on, the moon roof can be programmed to:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Slide (Standard) <input type="checkbox"/> Tilt <p>*If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p>34. Interior Light The interior light will illuminate when Power is switched to Off:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Off <input type="checkbox"/> On (Standard) 	<p>_____</p>	<p> Dealer only</p>

<u>Programmable by Dealer Only (cont'd)</u>	Using the Navigation System	Dealer
35. Illumination of the Interior Cabin Light when Unlocking Door When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
36. Illumination of the Interior Cabin Light when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
37. Illumination of the Center Console Spotlight The center console spotlight can be programmed as follows: <input type="checkbox"/> The center console spotlight will not illuminate = Off <input type="checkbox"/> The center console spotlight will illuminate (Standard) = On	_____	 Dealer only
38. Illumination of the Outer Foot Lights when Approaching the Vehicle When approaching the vehicle with the electronic key, the outer foot lights can be programmed as follows: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
39. Illumination of the Outer Foot Lights when Unlocking Door When unlocking the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
40. Instrument Dimming Sensitivity Level of light at which the instrument panel lights will dim: 	_____	 Dealer only
41. Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten: 	_____	 Dealer only
42. Tilt Away of Steering Wheel When vehicle is shifted into Park and ignition turned off, steering wheel can be set as follows: <input type="checkbox"/> Automatically move up and away from the driver position setting (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver = Off	_____	 Dealer only
43. Efficient Ventilation Mode When the front defogger is activated: <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off	_____	 Dealer only
44. Automatic Rear Sunshade* Rear sunshade automatically lowers when shift lever is shifted into Reverse: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard) *If equipped	_____	 Dealer only

Settings that can be customized by:

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
<p>45. Rear Sunshade Reverse Timer*</p> <p>When option #44 is on, rear sunshade will automatically lower in:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 0.7 seconds (Standard) <input type="checkbox"/> 1.2 seconds <input type="checkbox"/> 0.9 seconds <input type="checkbox"/> 0 seconds <p>*If equipped</p>	<p>_____</p>	 Dealer only

Date

Customer Signature

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)