



NX 300h

Lexus Personalized Settings

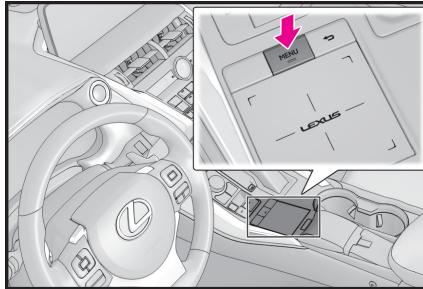
Your vehicle includes a variety of electronic features that can be programmed to your preferences. The programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6-month/5,000-mile scheduled maintenance service.

It is also possible to customize certain vehicle features yourself using the navigation system screen.

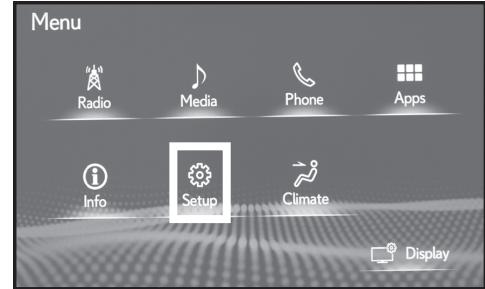
Vehicles with Display Audio System:

Vehicle must be in "On" mode to program personalized settings.

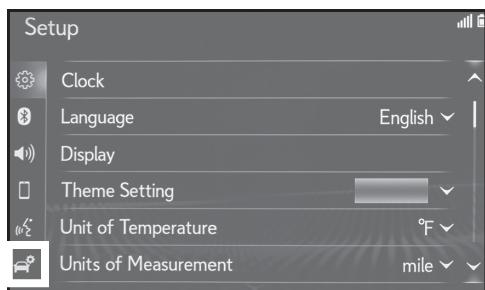
Please refer to the 2018 Lexus NX 300h Quick Guide or Owner's Manual for detailed information on Remote Touch operations.



STEP 1 Press the **MENU** button.



STEP 2 Highlight "Setup" with the touchpad. Press down to select.



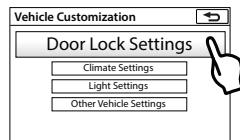
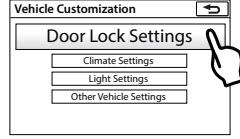
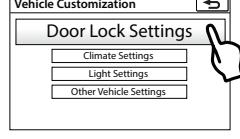
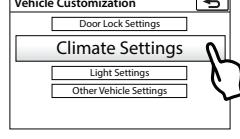
 
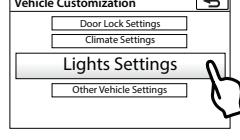
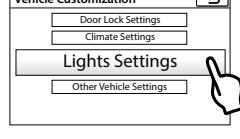
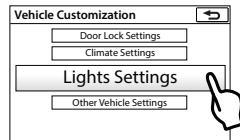
STEP 3
Select Vehicle on the sub menu.

STEP 4
Scroll to "Vehicle Customization" and press touchpad to select.
Then select desired categories for customization.

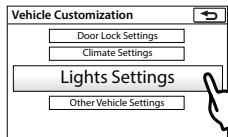
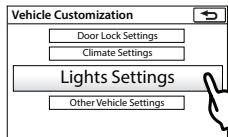
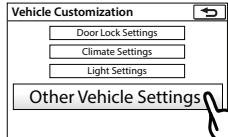
 
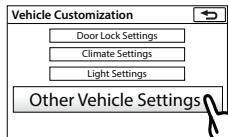
Settings that can be customized by:

	Using the Navigation System	Dealer
Door Lock Settings	 	
1. Automatic Door Lock The automatic door locks can be programmed as follows: <input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher = By Speed <input type="checkbox"/> The doors automatically lock when the vehicle is taken out of Park and shifted into another range (Standard) = By Shift from P <input type="checkbox"/> The doors will not automatically lock = Off	 	
2. Automatic Door Unlock The automatic door locks can be programmed as follows: <input type="checkbox"/> The doors automatically unlock when the vehicle is shifted into Park (Standard) = By Shift to P <input type="checkbox"/> All the doors automatically unlock when the driver door is opened = By Driver Door <input type="checkbox"/> The doors will not automatically unlock = Off	 	
3. Remote 2-Press Unlock When using the electronic key to unlock the doors: <input type="checkbox"/> Pressing the unlock button one time unlocks the driver's door and two times unlocks all doors (Standard) = On <input type="checkbox"/> Pressing the unlock button one time unlocks all doors = Off	 	
4. Select Doors to Unlock When using Smart Access to unlock the doors: <input type="checkbox"/> Gripping the driver door handle will unlock all doors = All Doors <input type="checkbox"/> Gripping the driver door handle will unlock the driver's door (Standard) = Driver's Door	 	

Settings that can be customized by:

Door Lock Settings (cont'd)	Using the Navigation System	Dealer
5. Auto Re-lock Timer When the doors are unlocked and not opened: <input type="checkbox"/> They will automatically re-lock in 120 seconds <input type="checkbox"/> They will automatically re-lock in 60 seconds (Standard) <input type="checkbox"/> They will automatically re-lock in 30 seconds <input type="checkbox"/> They will not re-lock = Off		
6. Lock/Unlock Feedback - Lights When the lock or unlock button on the electronic key is pressed: <input type="checkbox"/> Lock button makes lights flash once/Unlock button makes lights flash twice (Standard) = On <input type="checkbox"/> Lights will not flash = Off		
7. Lock/Unlock Feedback - Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows: 		
Climate Settings		
8. Auto A/C Mode When Auto A/C is selected: <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor* = Off *The A/C compressor will be engaged when the Auto A/C button is pressed a second time		
Lights Settings		
9. Headlights Auto-On Sensitivity The front headlights can be programmed to turn On under varying degrees of ambient light conditions (headlight switch must be in Auto mode): 		
10. Headlights Auto-Off Timer When the ignition is turned off and all the doors are closed (headlight switch must be in On or Auto mode): <input type="checkbox"/> The headlights will turn off in 90 seconds <input type="checkbox"/> The headlights will turn off in 60 seconds <input type="checkbox"/> The headlights will turn off in 30 seconds (Standard) <input type="checkbox"/> The headlights will turn off immediately when the vehicle is turned off and the driver door is opened		
11. Daytime Running Lights Illumination of daytime running lights: <input type="checkbox"/> On <input type="checkbox"/> Off (Standard)		

Settings that can be customized by:

<u>Lights Settings (cont'd)</u>	Using the Navigation System	Dealer
12. Interior Lights Auto-Off Timer The interior lights can be adjusted to stay on after closing the door as follows: <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off		
13. Exterior Lights Auto-Off Timer The exterior lights can be adjusted to stay on after closing the door as follows: <input type="checkbox"/> 30 seconds <input type="checkbox"/> 15 seconds (Standard) <input type="checkbox"/> 7.5 seconds <input type="checkbox"/> Off		
Other Vehicle Settings		
14. Driver's Seat Easy Exit* When the vehicle is placed in Park, the ignition turned Off, and the driver seat belt unfastened, the driver seat will: <input type="checkbox"/> Automatically move fully away from the steering wheel (Standard) = Full <input type="checkbox"/> Automatically move partially away from the steering wheel = Partial <input type="checkbox"/> Remain in the current position, as set by the driver = Off		
15. Power Back Door Opening Adjustment* Adjust the opening of the back door: 		
Programmable by Dealer Only		
16. Power Back Door Switch Operation* The back door opener button can be programmed as follows: <input type="checkbox"/> Press button one time to open back door = No Delay <input type="checkbox"/> Press and hold the button for 0.8 seconds to open back door (Standard) = Short Delay	_____	 Dealer only
17. Back Door Chime The chime that sounds while opening the back door can be programmed as follows: <input type="checkbox"/> Start buzzer On; in-operation buzzer Off (Standard) <input type="checkbox"/> Start buzzer Off; in-operation buzzer On	_____	 Dealer only
18. Opening Back Door Using Electronic Key Pressing the back door opener button on the electronic key will open the back door. <input type="checkbox"/> Press and hold button <input type="checkbox"/> Unlock the back door and then press the button (Standard)	_____	 Dealer only
19. Power Back Door Open Assist Operation* Pressing the power back door opener button on the rear door engages the power door function, and the door opens. <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only

* If equipped

Settings that can be customized by:

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
20. Opening Back Door Using Kick Sensor* Placing foot under the center area of the rear bumper while carrying the electronic key will open the power back door. <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
21. Access System with Electronic Key Unlock the doors with: <input type="checkbox"/> Electronic key unlock button (deactivates Smart Access) = Off <input type="checkbox"/> Smart Access (touch door handle) or electronic key (Standard) = On	_____	 Dealer only
22. Door Lock Buzzer When the lock button on the electronic key is pressed and a door is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
23. Panic Mode When pressing the panic button on the electronic key: <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash = Off <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash (Standard) = On	_____	 Dealer only
24. Wireless Remote Window Operation Buzzer When option #29 is on, and the wireless remote is used to open windows: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
25. Unlock on Second Key Turn When using the mechanical key to unlock the doors: <input type="checkbox"/> Turning the key one time will unlock all doors = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors (Standard) = On	_____	 Dealer only
26. Open Moon Roof Buzzer* When the lock button on the electronic key is pressed and the moon roof is not fully closed: <input type="checkbox"/> The buzzer will not sound = Off <input type="checkbox"/> The buzzer will sound (Standard) = On	_____	 Dealer only
27. Close Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not close the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will close the windows and moon roof = On	_____	 Dealer only
28. Open Windows and Moon Roof* with Mechanical Key When using the mechanical key to operate windows and moon roof: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not open the windows and moon roof (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will open the windows and moon roof = On	_____	 Dealer only
29. Open Windows and Moon Roof* with Electronic Key When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows and moon roof will not open (Standard) = Off <input type="checkbox"/> All the windows and moon roof will open = On	_____	 Dealer only

 
 
* If equipped

Settings that can be customized by:

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
30. Moon Roof Switch* - Auto Operation Pressing the open/close switch will automatically open or close the moon roof in one motion: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
31. Interior Light The interior light will illuminate when Power is switched to Off: <input type="checkbox"/> Off <input type="checkbox"/> On (Standard)	_____	 Dealer only
32. Illumination of the Interior Cabin Light when Unlocking Door When using the electronic or mechanical key to unlock the door: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
33. Illumination of the Interior Cabin Light when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The cabin light will not illuminate = Off <input type="checkbox"/> The cabin light will illuminate (Standard) = On	_____	 Dealer only
34. Illumination of the Outer Foot Lights when Approaching the Vehicle When approaching the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
35. Illumination of the Outer Foot Lights when Unlocking Door When unlocking the vehicle with the electronic key: <input type="checkbox"/> The outer foot lights will not illuminate = Off <input type="checkbox"/> The outer foot lights will illuminate (Standard) = On	_____	 Dealer only
36. Driver Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The driver seat belt reminder will not beep = Off <input type="checkbox"/> The driver seat belt reminder will beep (Standard) = On	_____	 Dealer only
37. Front Passenger Seat Belt Reminder When the vehicle reaches 12 mph: <input type="checkbox"/> The passenger seat belt reminder will not beep = Off <input type="checkbox"/> The passenger seat belt reminder will beep (Standard) = On	_____	 Dealer only
38. Lane Change Flasher Volume The turn signal volume can be programmed: <input type="checkbox"/> Medium (Standard) <input type="checkbox"/> Soft <input type="checkbox"/> Loud	_____	 Dealer only
39. Lane Change Signal Flashes Push the turn signal lever partway to signal a lane change. It will flash: <input type="checkbox"/> Off <input type="checkbox"/> 3 times (Standard) <input type="checkbox"/> 4 times <input type="checkbox"/> 5 times <input type="checkbox"/> 6 times <input type="checkbox"/> 7 times	_____	 Dealer only

* If equipped

Settings that can be customized by:

Programmable by Dealer Only (cont'd)	Using the Navigation System	Dealer
40. Instrument Dimming Sensitivity Level of light at which the instrument panel lights will dim:  very dark dark normal (Standard) light very light	_____	 Dealer only
41. Instrument Restore Sensitivity Level of light at which the instrument panel lights will brighten:  very light light normal (Standard) dark very dark	_____	 Dealer only
42. Tilt Away of Steering Wheel* When vehicle is shifted into Park and ignition turned off, steering wheel will: <input type="checkbox"/> Automatically move up and away from the driver position setting (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver = Off	_____	 Dealer only
43. Efficient Ventilation Mode When the front defogger is activated: <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield (Standard) = On <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor = Off	_____	 Dealer only
44. Linking Seat Position Memory with Door Unlock* When using Smart Access to unlock the doors, seat position memory recall can be programmed as follows: <input type="checkbox"/> The driver seat will move to memory position when the driver door is unlocked (Standard) = Driver's Door <input type="checkbox"/> The driver seat will move to memory position when any door is unlocked = Any Door	_____	 Dealer only

* If equipped

Date

Customer Signature

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)